


Installation Guidelines: Lock America ATM retrofit with Cam Adaptors.

Always **DISCONNECT** the Electric Power
before performing service.

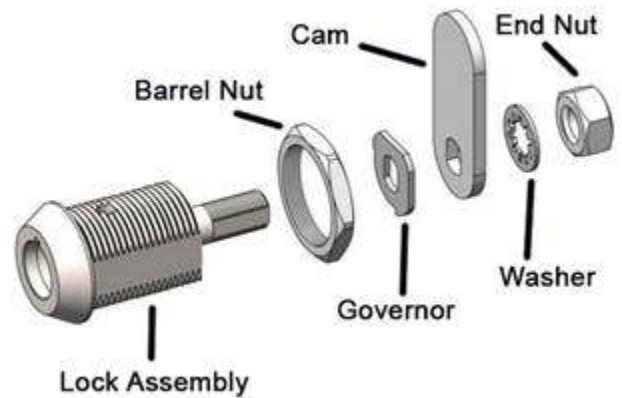

1. Remove the old lock.
Line up the pieces of the Lock America lock as shown in the diagram.
Save your original factory cam.



2. Insert the lock assembly through the original hole.
Attach the barrel nut and governor piece.

Hand tighten the barrel nut with a wrench.



3. Make sure the governor is lined up as shown.
For Right Turn Locks.
Align the lock with the stopper at 6 o'clock as shown by the arrow.
Align the cut out section of the governor disk at 6 o'clock to 9 o'clock as shown.



4. Attach the square adaptor and then place **your original cam** over it.



5. Place the end nut over the cam and hand tighten it with a wrench.



6. ***Check the lock for tightness before closing the door.***
Work the lock with the key a few times to make sure it operates smoothly.
Shut the door and make sure that it closes securely.
Repeat for other locks.



Reconnect the power.

Questions or problems?

Call 800-422-2866 or 951-277-5180.
between 8:00am and 8:00pm
Monday through Friday Pacific Time.